


Butane Range


- 1 Brass Burner -

PARTS DESCRIPTION

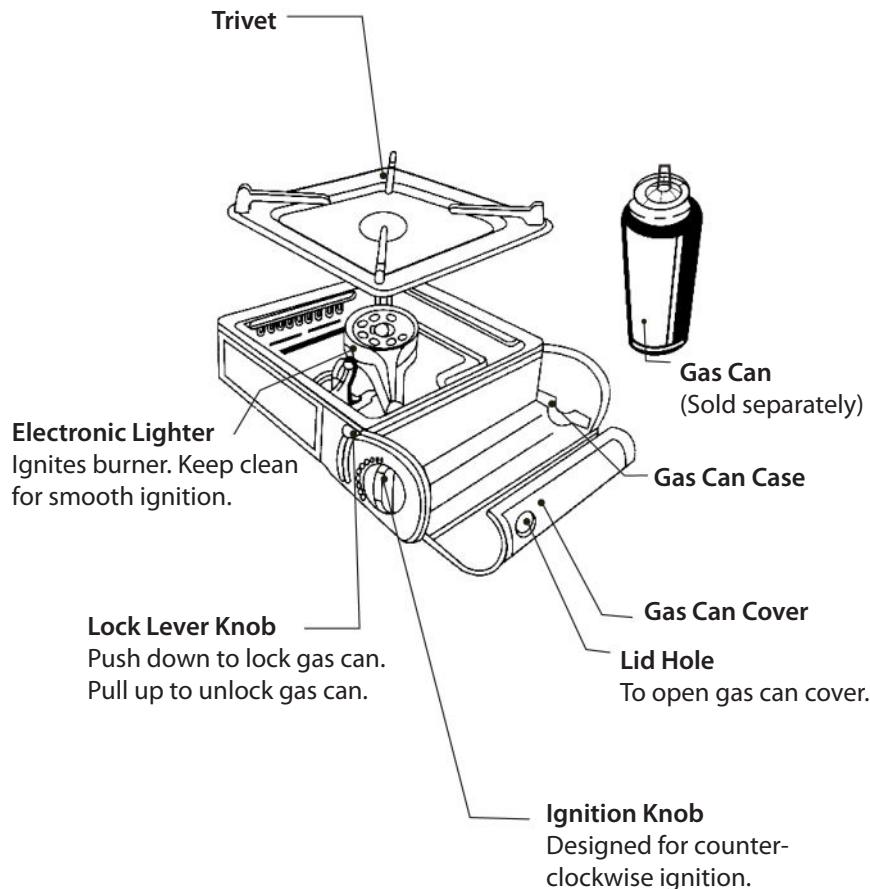


DIRECTIONS

1 Install the trivet in the correct position and open gas can cover.

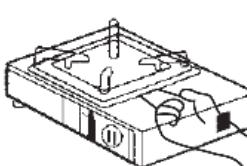


To open the trivet, pull it up smoothly from the gap.

2 Put the gas can in the gas can case.

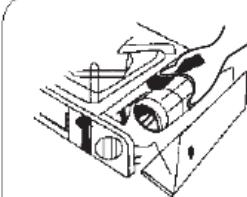


Make sure the size of the gas can is suitable for the stove.

3 Push down the lock lever knob.

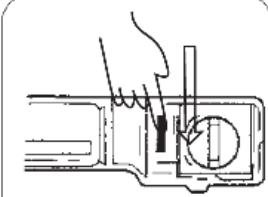


Make sure the gas can has been fixed into the correct position.

4 Close the gas can cover.

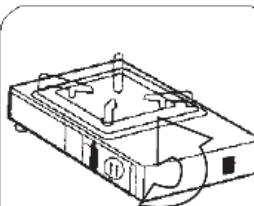


Refer to the image above.

5 Ignite the burner by turning the ignition knob to the left.

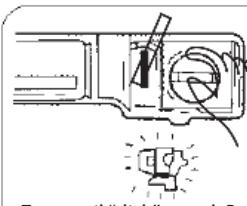


Turn until "click" sound. Be sure ignition knob is in "off" position when turning the lock lever knob.

6 Put on fry pan and adjust the flame by turning the ignition knob.

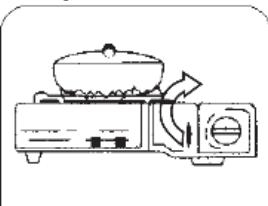


Turn the ignition knob from high to low to adjust the flame.

7 When finished cooking, turn off burner.

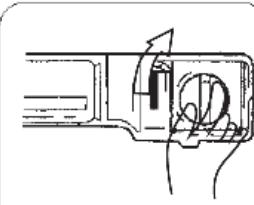

Turn the ignition knob to the "off" position.

8 Pull up the lock lever knob.

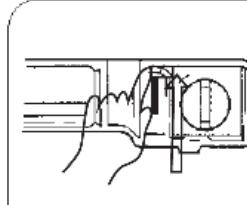

Make sure to pull up the lock lever knob to the "off" position when not in use.

INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

- Avoid strong wind. Otherwise the flame may be scattered or extinguished.
- Avoid direct exposure to sunlight. Avoid operating near flammable items. Keep away from wall 6" or more.
- Place the trivet in the correct position. Otherwise, the ignition knob will not function.
- If you smell gas, turn off and take outside where the leak may be detected. You can check for leaks with soapy water.

1. After gas can is empty...

Do not throw the used gas cans into fire. A hole must be drilled into the can before thrown away.

2. Do not let food overheat...

Don't let liquids overflow into the burner. If this happens, turn off and wipe with a dry towel.

3. Only for cooking...

Do not use gas stove for any other reason.

4. In case of accident...

Switch off the ignition knob and unlock the gas can.

5. Do not let range overheat...

Do not put two ranges beside each other. Do not put too large of a pan on the range.

6. Do not let gas leak...

Be sure the gas can fits in the gas can case correctly. If you hear a hissing sound while installing the can, take can out and re-install. Do not ignite the appliance when the gas can is not in the correct position.



TECHNICAL DATA

Product	Portable Gas Stove
Size	13.5"x11.25"x3.5"
Weight	3.5 lbs
Fuel	Butane Gas
Fuel Consumption	5 oz./hr.



The design and standard may be changed for the improvement of quality without notice.

READ ENTIRE MANUAL BEFORE OPERATING RANGE